

**PR**  
electronics



**5 2 2 5**

**Programmable f/i - f/f  
converter**

No. 5225V101-UK

From ser. no. 970297001



- DK** ▶ PR electronics A/S tilbyder et bredt program af analoge og digitale signalbehandlingsmoduler til industriel automation. Programmet består af Isolatorer, Displays, Ex-barrierer, Temperaturtransmittere, Universaltransmittere mfl. Vi har modulerne, du kan stole på i selv barske miljøer med elektrisk støj, vibrationer og temperaturudsving, og alle produkter opfylder de strengeste internationale standarder. Vores motto »Signals the Best« er indbegrebet af denne filosofi - og din garanti for kvalitet.
- UK** ▶ PR electronics A/S offers a wide range of analog and digital signal conditioning devices for industrial automation. The product range includes Isolators, Displays, Ex Interfaces, Temperature Transmitters, and Multifunctional Devices. You can trust our products in the most extreme environments with electrical noise, vibrations and temperature fluctuations, and all products comply with the most exacting international standards. »Signals the Best« is the epitome of our philosophy - and your guarantee for quality.
- FR** ▶ PR electronics A/S offre une large gamme de produits pour le traitement des signaux analogiques et numériques dans tous les domaines industriels. La gamme de produits s'étend des transmetteurs de température aux afficheurs, des isolateurs aux interfaces SI, jusqu'aux modules universels. Vous pouvez compter sur nos produits même dans les conditions d'utilisation sévères, p.ex. bruit électrique, vibrations et fluctuations de température. Tous nos produits sont conformes aux normes internationales les plus strictes. Notre devise »SIGNALS the BEST« c'est notre ligne de conduite - et pour vous l'assurance de la meilleure qualité.
- DE** ▶ PR electronics A/S verfügt über ein breites Produktprogramm an analogen und digitalen Signalverarbeitungsgeräte für die industrielle Automatisierung. Dieses Programm umfasst Displays, Temperaturtransmitter, Ex- und galvanische Signaltrenner, und Universalgeräte. Sie können unsere Geräte auch unter extremen Einsatzbedingungen wie elektrisches Rauschen, Erschütterungen und Temperaturschwingungen vertrauen, und alle Produkte von PR electronics werden in Übereinstimmung mit den strengsten internationalen Normen produziert. »Signals the Best« ist Ihre Garantie für Qualität!

# PROGRAMMABLE f/I - f/f CONVERTER

5225

## TABLE OF CONTENTS

Warning.....	4
Safety instructions.....	5
How to dismantle system 5000.....	7
In general .....	8
Applications.....	9
Technical characteristics.....	9
Input.....	9
Analogue output.....	9
Digital output(s).....	10
Relay outputs.....	10
Status indication .....	10
Electrical specifications.....	11
Order .....	15
Block diagram.....	15
5225 connection to Loop Link.....	16



**GENERAL**

## WARNING

This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage. To avoid the risk of electric shock and fire, the safety instructions of this manual must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following. Prior to the commissioning of the device, this manual must be examined carefully. Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.



**HAZARDOUS  
VOLTAGE**

## WARNING

Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD safe conditions:

Dismantlement of the device for setting of dipswitches and jumpers.

General mounting, connection and disconnection of wires.

Troubleshooting the device.

**Repair of the device and replacement of circuit breakers must be done by PR electronics A/S only.**



**INSTALL-  
LATION**

## WARNING

SYSTEM 5000 must be mounted on DIN rail according to DIN 46277. The communication connector of SYSTEM 5000 is connected to the input terminals on which dangerous voltages can occur, and it must only be connected to the programming unit Loop Link by way of the enclosed cable.

## SYMBOL IDENTIFICATION



**Triangle with an exclamation mark:** Warning / demand. Potentially lethal situations.



**The CE mark** proves the compliance of the device with the essential requirements of the directives.



**The double insulation symbol** shows that the device is protected by double or reinforced insulation.

# SAFETY INSTRUCTIONS

## DEFINITIONS

**Hazardous voltages** have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

**Technicians** are qualified persons educated or trained to mount, operate, and also troubleshoot technically correct and in accordance with safety regulations.

**Operators**, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

## RECEIPT AND UNPACKING

Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

## ENVIRONMENT

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

All devices fall under Installation Category II, Pollution Degree 2, and Insulation Class II.

## MOUNTING

Only technicians who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these should connect the device.

Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively,

**PR electronics A/S**  
**[www.prelectronics.com](http://www.prelectronics.com)**

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.a. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label telling it will switch off the voltage to the device.

### **CALIBRATION AND ADJUSTMENT**

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

### **NORMAL OPERATION**

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

### **CLEANING**


When disconnected, the device may be cleaned with a cloth moistened with distilled water.

### **LIABILITY**


To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against PR electronics A/S that would otherwise exist according to the concluded sales agreement.

## HOW TO DISMANTLE SYSTEM 5000


First, remember to demount the connectors with hazardous voltages. By lifting the bottom lock, the device is detached from the DIN rail as shown in picture 1. Then, by lifting the upper lock and pulling the front plate simultaneously the PCB is removed as shown in picture 2. Switches and jumpers can now be adjusted. By opening the front, the programming connector is accessible as shown in picture 3.

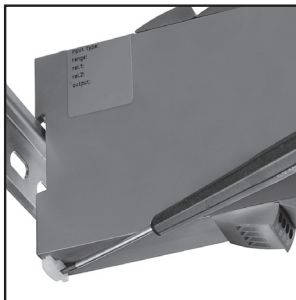

Picture 1: Separation from DIN rail.

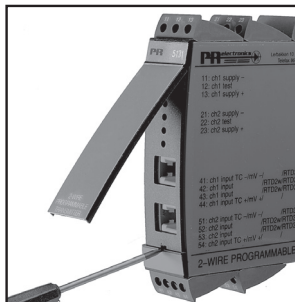

Picture 3: Access to programming connector.

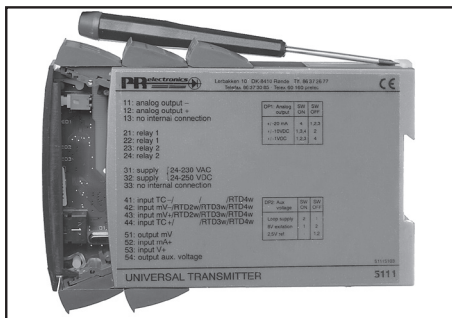

Picture 2: Removal of PCB.

# PROGRAMMABLE f/I - f/f CONVERTER 5225

- *Pulse conditioning*
- *Frequency generator*
- *Concurrent f/I and f/f function*
- *Analogue current and voltage output*
- *PNP / NPN output, optional relays*
- *Programmable by PC and Loop Link*

---

<b>Supply voltage:</b>	<b>24 VDC</b>
------------------------	---------------

---

	<b>INPUT RANGE:</b>	
<b>Frequency:</b>		<b>0...20000 Hz</b>
<b>Sensor types:</b>		<b>NAMUR, tacho, NPN, PNP, TTL, SO</b>

---

#### **OUTPUT RANGE:**

<b>Current and voltage output:</b>	<b>0...20 mA / 0...10 V</b>
<b>Relay outputs:</b>	<b>0...20 Hz</b>
<b>NPN and PNP output as f/f:</b>	<b>0...1000 Hz</b>
<b>NPN and PNP output as generator:</b>	<b>0...20000 Hz</b>

---

#### **IN GENERAL**

By way of a standard PC and the Loop Link programming kit, the 5225 f/I - f/f Converter is configured acc. to the requested function.

Alternatively, the 5225 may be delivered fully-configured acc. to your specifications.

Typical pulse sources are flow meters, tacho generators, mechanical switches, or inductive proximity sensors.



## APPLICATIONS

**The f/I function** performs frequency to current and voltage conversion.

The output can be programmed to show period meaning that the input frequency can be converted to a linear time signal.

The digital outputs are used as e.g. a frequency watch for speed control or as a window comparator having one status between 2 limits and the opposite status outside these limits.

**The f/f function** can be used for pulse division or multiplication and as a buffer collecting fast pulse trains. The input pulses are calculated, counted in a buffer, and sent to the output as a pulse train with the programmed pulse width.

**The concurrent f/I and f/f functions** enable a scaled digital output signal in conjunction with the analogue output.

**The frequency generator function** is used as e.g. a time base or clock generator.

## TECHNICAL CHARACTERISTICS

### INPUT

Programmable input for standard pulse generator connection.

Normally, the auxiliary supply and trigger level follow the sensor type, but these can be programmed acc. to other values.

At contact input, the 50 Hz filter should be applied.

The PRecon 5225 is protected against polarity reversal on input and supply.

### ANALOGUE OUTPUT

The analogue current and voltage output can be scaled acc. to your choice in relation to the digital input. Max. zero offset is 50% of selected measurement range. Programmable response time.

Short circuit-protected output.

When both current and voltage signals are used simultaneously, the mA loop to ground passes through the internal shunt.

**Standard voltage output** (pin 12) is obtained by leading the current signal (pin 13) through an internal shunt resistor (pin 12). At current signals in the ranges 0...1 VDC, a 50  $\Omega$  shunt (JP1) is applied; in the ranges 0...10 VDC, a 500  $\Omega$  shunt (JP2) is applied.

## **DIGITAL OUTPUT(S)**

Both NPN / PNP and relay outputs can be set up with delayed on and off. The action on the outputs can be inverted, and the hysteresis can be set acc. to your specifications.

At power-up, shifts on the outputs can be delayed for up to 999 s.

**NPN and PNP outputs** for external relay, electromechanical counter, PLC input, or equivalent load.

The outputs are current-limited by way of PTC resistors.

Active output is established by connecting the NPN to the PNP output (jumper pins 22-23).

## **RELAY OUTPUTS**

The PRecon 5225 can be delivered with 2 relay outputs that are programmed individually.

## **STATUS INDICATION**

The 5225 is equipped with 4 front LEDs.

**f in:** Indicates an active input (non-active at NPN input).

**Dig. out. 1:** Indicates active NPN or relay 1 output.

**Dig. out. 2:** Indicates active relay 2 output.

**Error:** Indicates sensor error at NAMUR input.

## ELECTRICAL SPECIFICATIONS

### Specifications range:

-20°C to +60°C

### Common specifications:

Supply voltage .....	19.2...28.8 VDC
Internal consumption .....	1.7 W
Max. consumption.....	3.5 W
Power-up delay (digital outputs) .....	0...999 s
Warm-up time.....	30 s
Communications interface .....	Loop Link
Signal / noise ratio .....	min. 60 dB
Response time, analogue .....	< 60 ms + period
Response time, digital output.....	< 50 ms + period
Response time, concurrent f/l and f/f.....	< 80 ms + period
Calibration temperature .....	20...28°C
Temperature coefficient.....	< ±0.01% of span / °C
Linearity error .....	< ±0.1% of span
Effect of supply voltage change .....	< 0.002% of span / %V

### Auxiliary voltages:

Namur supply .....	8.3 VDC ±0.5 VDC / 8 mA
SO supply .....	17 VDC / 20 mA
NPN / PNP supply.....	17 VDC / 20 mA
Special supply (programmable).....	5...17 VDC / 20 mA

EMC immunity influence .....

< ±0.5%
---------

Max. wire size.....	1 x 2.5 mm <sup>2</sup> stranded wire
Screw terminal torque .....	0.5 Nm
Air humidity.....	< 95% RH (non-cond.)
Dimensions (HxWxD) .....	109 x 23.5 x 130 mm
DIN rail type.....	DIN 46277
Protection degree .....	IP20
Weight .....	190 g

**Input:****General:**

Measurement range.....	0...20 kHz
Min. measurement range .....	0.001 Hz
Max. offset .....	90% of selected max. frequency
Low cut off .....	0.001 Hz
Min. pulse width (without filter) .....	25 $\mu$ s
Min. period (without filter).....	50 $\mu$ s
Max. frequency (without filter) .....	20 kHz
Min. pulse width (with filter) .....	10 ms
Min. period (with filter) .....	20 ms
Max. frequency (with filter) .....	50 Hz
Programmable trig-level.....	0.025...6.5 V (nom.)
Trig-level LOW .....	> 50% of trig high
.....	- 50 mV

**NAMUR input acc. to DIN 19234:**

Trig-level LOW .....	$\leq$ 1.2 mA
Trig-level HIGH.....	$\geq$ 2.1 mA
Input impedance .....	1000 $\Omega$

**Sensor error detection (only for NAMUR):**

Breakage .....	$\leq$ 0.1 mA
Short circuit.....	$\geq$ 7.0 mA
Response time .....	$\leq$ 400 ms

**Tacho input:**

Trig-level LOW .....	$\leq$ - 50 mV
Trig-level HIGH.....	$\geq$ 50 mV
Input impedance .....	$\geq$ 100 k $\Omega$
Max. input voltage .....	80 VAC pp

**NPN / PNP input:**

Trig-level LOW .....	$\leq$ 4.0 V
Trig-level HIGH.....	$\geq$ 7.0 V
Input impedance, standard .....	3.48 k $\Omega$
Input impedance, special version.....	13.3 k $\Omega$ / NPN

**TTL input:**

Trig-level LOW .....	≤ 0.8 VDC
Trig-level HIGH .....	≥ 2.0 VDC
Input impedance .....	≥ 100 kΩ

**SO input acc. to DIN 43 864:**

Trig-level LOW .....	≤ 2.2 mA
Trig-level HIGH .....	≥ 9.0 mA
Input impedance .....	800 Ω

**Analogue output:****Current output:**

Signal range .....	0...20 mA
Min. signal range .....	5 mA
Max. offset .....	50% of selected max. value
Signal dynamics .....	16 bit
Updating time .....	20 ms
Updating time for concurrent f/I and f/f .....	40 ms
Load (max.) .....	20 mA / 600 Ω / 12 VDC
Load stability .....	< ±0.01% of span / 100 Ω
Current limit .....	≤ 23 mA

**Voltage output through internal shunt:**

Signal range .....	0...10 VDC
Min. signal span .....	250 mV
Max. offset .....	50% of selected max. value
Load (min.) .....	500 kΩ

**Digital outputs (NPN / PNP):**

I <sub>max.</sub> source .....	30 mA
I <sub>max.</sub> sink .....	130 mA
V <sub>max.</sub> .....	28.5 VDC

**f/f converter output:**

Signal range .....	0...1000 Hz
Multiplicator / Divisor .....	1.0000...1000000
Min. pulse width .....	500 μs
Max. pulse width .....	999 ms
Max. duty cycle .....	50%

**Frequency generator:**

Min. period .....	50 μs
Max. frequency .....	20 kHz
Duty cycle .....	50%

**Relay output:**

Isolation, test / operation.....	3.75 kVAC / 250 VAC
Frequency max.....	20 Hz
V <sub>max</sub> .....	250 VRMS
I <sub>max</sub> .....	2 A / AC
Max. AC power .....	500 VA
Max. load at 24 VDC.....	1 A

**Observed authority requirements:**

EMC 2004/108/EC .....	EN 61326-1
LVD 2006/95/EC.....	EN 61010-1
PELV/SELV .....	IEC 364-4-41 and EN 60742
EAC TR-CU 020/2011.....	EN 61326-1


**Standard:**

Of span = Of the presently selected range

## ORDER

Type	Version	Output
5225	Standard : A	Analogue + NPN / PNP : 1
		Analogue + relay output : 2

## BLOCK DIAGRAM

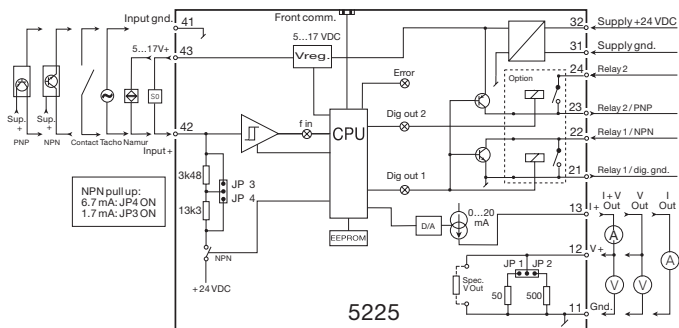







**Displays** Programmable displays with a wide selection of inputs and outputs for display of temperature, volume and weight, etc. Feature linearization, scaling, and difference measurement functions for programming via PReset software.



**Ex interfaces** Interfaces for analog and digital signals as well as HART signals between sensors / I/P converters / frequency signals and control systems in Ex zone 0, 1 & 2 and for some devices in zone 20, 21 & 22.



**Isolation** Galvanic isolators for analog and digital signals as well as HART signals. A wide product range with both loop-powered and universal isolators featuring linearization, inversion, and scaling of output signals.






























**Temperature** A wide selection of transmitters for DIN form B mounting and DIN rail devices with analog and digital bus communication ranging from application-specific to universal transmitters.



**Universal** PC or front programmable devices with universal options for input, output and supply. This range offers a number of advanced features such as process calibration, linearization and auto-diagnosis.



- 
 [www.preelectronics.fr](http://www.preelectronics.fr)  
 [sales-fr@preelectronics.com](mailto:sales-fr@preelectronics.com)
- 
 [www.preelectronics.de](http://www.preelectronics.de)  
 [sales-de@preelectronics.com](mailto:sales-de@preelectronics.com)
- 
 [www.preelectronics.es](http://www.preelectronics.es)  
 [sales-es@preelectronics.com](mailto:sales-es@preelectronics.com)
- 
 [www.preelectronics.it](http://www.preelectronics.it)  
 [sales-it@preelectronics.com](mailto:sales-it@preelectronics.com)
- 
 [www.preelectronics.se](http://www.preelectronics.se)  
 [sales-se@preelectronics.com](mailto:sales-se@preelectronics.com)
- 
 [www.preelectronics.com](http://www.preelectronics.com)  
 [sales-uk@preelectronics.com](mailto:sales-uk@preelectronics.com)
- 
 [www.preelectronics.com](http://www.preelectronics.com)  
 [sales-us@preelectronics.com](mailto:sales-us@preelectronics.com)
- 
 [www.preelectronics.cn](http://www.preelectronics.cn)  
 [sales-cn@preelectronics.com](mailto:sales-cn@preelectronics.com)
- 
 [www.preelectronics.be](http://www.preelectronics.be)  
 [sales-be@preelectronics.com](mailto:sales-be@preelectronics.com)

## Head office

Denmark  
 PR electronics A/S  
 Lerbakken 10  
 DK-8410 Rønde

[www.preelectronics.com](http://www.preelectronics.com)  
[sales-dk@preelectronics.com](mailto:sales-dk@preelectronics.com)  
 tel. +45 86 37 26 77  
 fax +45 86 37 30 85



QUALITY SYSTEM AND ENVIRONMENTAL MANAGEMENT SYSTEM  
 DS/EN ISO 9001  
 DS/EN ISO 14001

