



**ADVARSEL**  
Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendte med de tekniske udtryk, advarsler og instruktioner i installationsvejledningen, og som vil følge disse.

Hvis der er tvivl om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler eller alternativt direkte til PR electronics A/S.

Installation og tilslutning af modulet skal følge landets gældende regler for installation af elektrisk materiel.

Udskiftning af komponenter kan forringe egenskaber.

Reparation af modulet må kun foretages af PR electronics A/S.

Transmitterdækslet må ikke fjernes i eksplosionsfarligt område, når kredsløbet er strømførende.

Transmitterdækslet skal være helt lukket for at overholde kravene til eksplosionsikring.

Hvis transmittøren er installeret i områder med kraftige vibrationer, kan det være nødvendigt med ekstra befæstning.

Ved installation i eksplosionsfarligt område skal den tilhørende installationstegning følges nøje.

Vær opmærksom på ikke at frembringe mekaniske gnister, når instrumentet og tilhørende enheder tilgås i eksplosionsfarligt område.

#### Elektriske specifikationer

Anvendelsestemperatur med silikon O-ring.....	-40°C til +85°C
med FKM O-ring.....	-20°C til +85°C
Reduceret LCD-ydeevne under -20°C og over +70 °C	
Opbevaringstemperatur.....	-40°C til +85°C
Kalibreringstemperatur.....	20...28°C
Relativ luftfugtighed.....	0...100% RF (kond.)
Kapslingsklasse.....	IP54 / IP66 / IP68 type 4X

#### Mekaniske specifikationer

Diameter.....	Ø 110 mm
Mål, H x B x D.....	109x145x125,5 mm
Vægt, ca.....	1,3 kg
Ledningskvadrat.....	0,13...1,5 mm <sup>2</sup> / AWG 26...16 flerkoret ledning
Klemskruetilspændingsmoment.....	0,4 Nm
Vibration.....	IEC 60068-2-6 : 2007 2...25 Hz ±1,6 mm 25...100 Hz ±4 g

#### Fælles specifikationer:

Forsyningsspænding, DC	10...30 VDC
Ex ia, egensikker	(12...30 VDC med baggrundsbelysning)
Øvrige	10...35 VDC (12...35 VDC med baggrundsbelysning)
Isolationsspænd., test/oper..	1,5 kVAC / 50 VAC
Langtidsstabilitet.....	0,1% af span / år

#### Indgangsspecifikationer:

<b>Indgang for RTD-typer:</b>	
Pt50, Pt100, Pt200, Pt500, Pt1000, Ni50, Ni100, Ni120, Ni1000	
Kabelmodstand pr. leder (max.).....	5 Ω
Falerstrøm.....	Nom. 0,2 mA

#### Indgang for TC-typer:

B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

#### mV-indgang:

Måleområde, spænding.....	-800...+800 mV
Min. span.....	2,5 mV
Indgangsmodstand.....	10 MΩ

#### Strømodgang:

Signalområde.....	4...20 mA
Min. signalområde.....	16 mA
Belastningsmodstand.....	≤ (Vforsyn. - 10) / 0,023 [Ω]
med baggrundsbelysning..	≤ (Vforsyn. - 12) / 0,023 [Ω]

Falerfejlsdetektering, programmerbar.....	3,5...23 mA
NAMUR NE43 Upscale.....	23 mA
NAMUR NE43 Downscale.....	3,5 mA
HART-protokolrevisorer.....	HART 7 og HART 5

#### Overholdte myndighedskrav:

EMC.....	2014/30/EU
ATEX.....	2014/34/EU
RoHS.....	2011/65/EU
EAC.....	TR-CU 020/2011



DK Typennr.  
UK Type no.  
FR No. de type.  
DE Typennr.

DK Produktionsår fremgår af de to første cifre i serienummeret.

UK Year of manufacture can be taken from the first two digits in the serial number.

FR L'année de production est définie grace aux deux premiers chiffres du numéro de série.

DE Die ersten beiden Ziffern der Seriennummer geben das Produktionsjahr an.

DK Når modulet installeres som Ex ia, ic, d, nA eller tb, skal der på topskiltet sættes en kørnergrik til markering af den anvendte installationstype.

FR Lorsque ce produit a été installé comme Ex ia, ic, d, nA ou tb, utiliser un poinçon à marquer dans la case appropriée pour indiquer le type d'installation sur l'étiquette.

UK When this product has been installed as Ex ia, ic, d, nA or tb, use a punch marker in the appropriate box to indicate the type of installation on the top label.

DE Wenn dieses Produkt als Ex ia, ic, d, nA oder tb installiert ist, nutzen Sie bitte die entsprechenden Felder auf dem Top-Label, um die Art der Installation zu kennzeichnen.

Product	ATEX	Area / Zone	Installation drawing	IECEx	Area / Zone	Installation drawing	INMETRO	Area / Zone	Installation drawing
7501xxxxx2	DEKRA 15ATEX0058 X	0, 1, 2, 20, 21, 22	7501QA01	DEK 15.0039 X	0, 1, 2, 20, 21, 22	7501QI01	DEKRA 15.0014 X	0, 1, 2, 20, 21, 22	7501QB01

Product	CSA	Zone / Div.	Installation drawing	FM	Zone / Div.	Installation drawing	NEPSI	EAC Ex	EU RO marine
7501xxxxx2	70024231	0, 1, 2 / Div. 1/2	7501QC01	FM16US0009X FM16CA0010X	0, 1, 2 / Div. 1/2	7501QF01	GV15.1336X GV15.1337X GV15.1338X	RU C DK.GB08.V.01316	MRA0000009
7501xxxxx1									MRA0000009

PR electronics A/S  
Lerbakken 10  
DK-8410 Rønde

Tel. +45 8637 2677  
Fax +45 8637 3085  
www.prelectronics.com


Documentation, permits and other information can be found on the internet at [www.prelectronics.com](http://www.prelectronics.com)

Dokumentationen, Zulassungen und andere Informationen können auf unserer Internet-Seite unter [www.prelectronics.de](http://www.prelectronics.de) gefunden und abgerufen werden.

Documentation, godkendelser og yderligere information findes på internettet på [www.prelectronics.dk](http://www.prelectronics.dk)

La documentation et toute autre information peuvent être trouvées sur notre site: [www.prelectronics.fr](http://www.prelectronics.fr)

Documentações, licenças e outras informações podem ser encontradas no site [www.prelectronics.com](http://www.prelectronics.com)

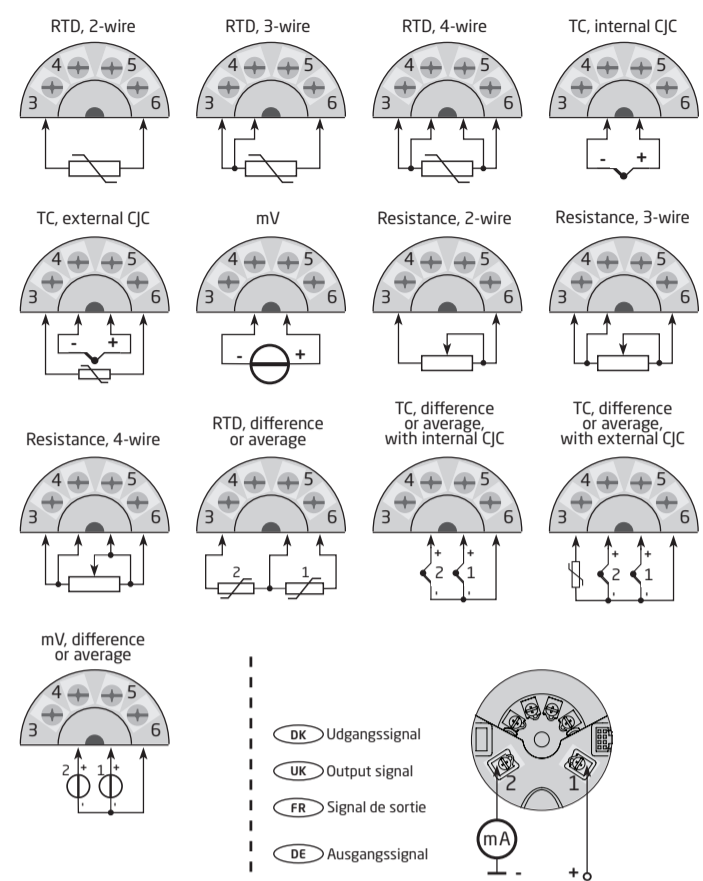


DK Konfiguration med HART modem og PReset PC konfigurationssoftware.

UK Configuration with a HART modem and the PReset software.

FR Programmation avec le modem HART et le logiciel PReset.

DE Programmierung mittels HART Modem und PReset PC Programmierungssoftware.



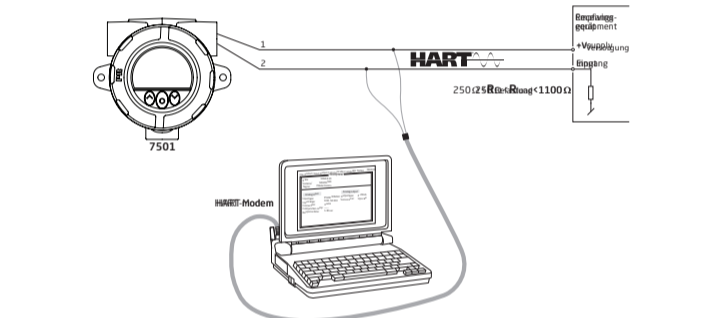


DK Konfiguration med HART kommunikator indeholdende 7501H5 eller 7501H7 DD driver.

UK Configuration with a HART compliant handheld communicator having the 7501H5 or 7501H7 DD driver installed.

FR Programmation avec le communicateur HART chargé avec le pilote DD 7501H5 ou 7501H7 DD.

DE Programmierung mittels HART Datenaustauschgerät mit 7501H5 oder 7501H7 DD-Antrieb.

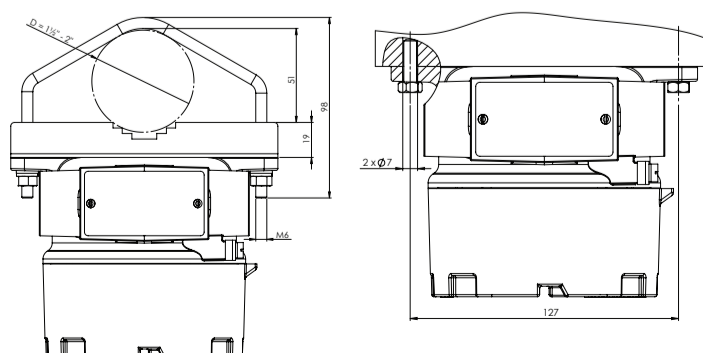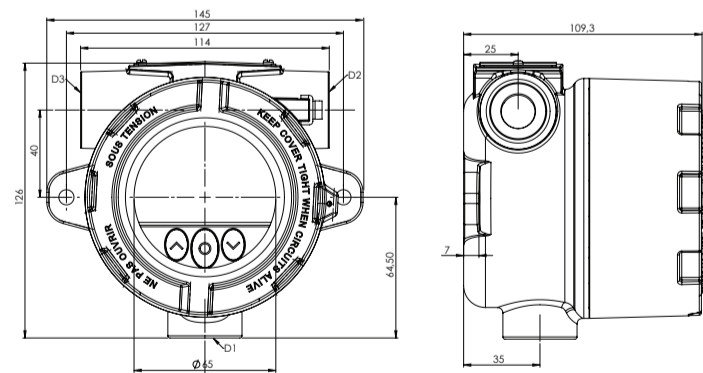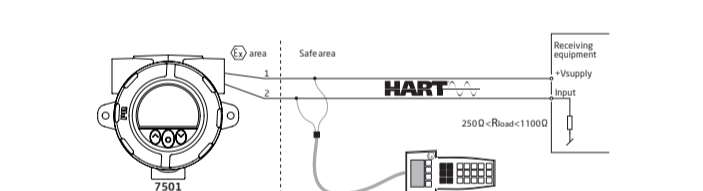

7501 ATEX Installation

For safe installation of 7501 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards (EN60079-14) that apply to this area.


Ex ia installation:

ATEX Certificate DEKRA 15ATEX0058 X

Marking II 1 G Ex ia IIC T6...T4 Ga II 1 D Ex ia IIIC T100°C Da I M1 Ex ia I Ma (7501B)

Standards: EN 60079-0: 2012, EN 60079-11: 2012

Hazardous area Zone 0, 1, 2, 20, 21, 22, (Mines) Non Hazardous Area

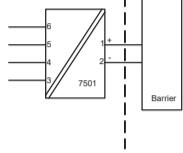

Sensor Terminal: 3,4,5,6 Supply Terminal: 1,2. Technical specifications for sensor and supply terminals.

Ex ia installation

General installation instructions. The sensor circuit is not infallibly galvanic isolated from the supply output circuit.

The enclosure must be connected to the potential matching line

If the transmitter is physically connected to a possible source of heating or cooling, e.g. by mounting to a process pipe or a temperature sensor, the temperature at the point of connection shall be within the ambient temperature range as given in the certificate or this manual.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For installation of 7501A in zone 0 / EPL Ga, the transmitter must be installed such, that even in the event of rare incidents, ignition sources due to impact and friction, sparks are excluded.

Protection degree of IP 54 according to EN 60529 is achieved if certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed.

Protection degree of IP 68 according to EN 60529 is only achieved if certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed with sealing washers or Loctite sealant added to the threads of the sensor, blanking elements and cable glands.

For group III (dust), electrostatic charging of the paint layer shall be avoided

Ex nA, ic installation:

Certificate DEKRA 15ATEX0058 X

Marking II 3 G Ex nA IIC T6...T4 Gc II 3 G Ex ic IIC T6...T4 Gc II 3 D Ex ic IIIC T100°C Dc


Standards: EN 60079-0:2012, EN 60079-11:2012, EN60079-15:2010

Type of protection Ex nA Type of protection Ex ic

O-ring Sealing: Silicone. Technical specifications for O-ring sealing.

O-ring Sealing: FKM. Technical specifications for O-ring sealing.

Hazardous area Zone 2, 22 Non Hazardous Area

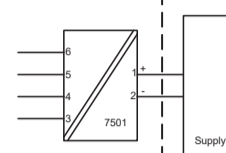

Sensor Terminal: 3,4,5,6 Supply Terminal: 1,2. Technical specifications for sensor and supply terminals.

Ex nA, ic installation:

For an ambient temperature exceeding 70 °C, heat resistant cables and cable glands suitable for at least 90°C shall be used.

If the transmitter is physically connected to a possible source of heating or cooling, e.g. by mounting to a process pipe or a temperature sensor, the temperature at the point of connection shall be within the ambient temperature range as given in the certificate.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

The enclosure must be connected to the potential matching line

Applied screw terminal torque is max 0.4 Nm on all terminals.

Protection degree of IP 54 according to EN 60529 is achieved if certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed.

Protection degree of IP 68 according to EN 60529 is only achieved if certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed with sealing washers or Loctite sealant added to the threads of the sensor, blanking elements and cable glands.

For group III (dust), electrostatic charging of the paint layer shall be avoided

Ex d, tb installation:


ATEX Certificate DEKRA 15ATEX0058 X

Marking II 2 G Ex d IIC T6...T4 Gb II 2 D Ex tb IIIC T100°C Db

Standards: EN 60079-0:2012, EN 60079-1:2007, EN60079-31:2014

Type of protection Ex d Type of protection Ex tb. Technical specifications for protection types.

Hazardous area Zone 1, 2, 21, 22 Non Hazardous Area

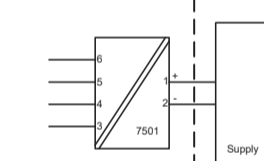

Terminal: 3,4,5,6 Sensor: RTD or TC Terminal: 1,2 Umax: 35 VDC

Ex d, tb installation:

The transmitter is intended, either to be connected via a cable, or to be mounted directly onto a temperature sensing probe.

If the transmitter is physically connected to a possible source of heating or cooling, e.g. by mounting to a process pipe or a temperature sensor, the temperature at the point of connection shall be within the ambient temperature range as given in the certificate.

Unused cable entries must be sealed by the blanking elements 8550-xxx and 8551-xxx supplied with the 7501 or other Ex d and/or Ex tb certified blanking elements suitable for the application.

Only Ex d and/or Ex tb certified cable and cable glands shall be used that are suitable for the application and correctly installed.

Protection degree of IP 54 according to EN 60529 is achieved if Ex d certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed.

Protection degree of IP 68 according to EN 60529 is only achieved if Ex d certified cable glands or conduit entry devices are used that are suitable for the application and correctly installed with sealing washers or Loctite sealant added to the threads of the sensor, blanking elements and cable glands.

The display cover must be screwed all the way in and the safety catch must be fastened before putting into service. Do not open display cover until 30 minutes after disconnecting power to the equipment allowing internal capacitors to discharge, or do not open display cover unless area is known to be safe

For an ambient temperature exceeding 70 °C, heat resistant cables and cable glands suitable for at least 90°C shall be used.

The enclosure must be connected to the potential matching line.

When the process temperature range exceeds the service temperature range it shall be verified by on-site temperature measurements, taking the worst case conditions into account, that the service temperature does not exceed the range of the module.

For group III (dust), electrostatic charging of the paint layer shall be avoided

No modification to the enclosure is allowed by the customer except as mentioned in the manual or installation drawing.


7501 CSA Installation

For safe installation of 7501 the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Intrinsic Safe Installation / SÉCURITÉ INTRINSÈQUE, Exia

Applicable for (7501A... and 7501B...).

Hazardous classified Location Class I, Division 1, Groups, ABCD; Class II, Group EFG; Class III, Division 1; Class I, Zone 0, IIC Ex/AEx ia IIC Ga Non classified Location

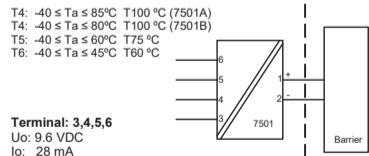

Terminal: 3,4,5,6 Supply Terminal: 1,2. Technical specifications for sensor and supply terminals.

Warning Substitution of components may impair intrinsic safety.

AVERTISSEMENT LA SUBSTITUTION DE COMPOSANTS PEUT COMPROMETTRE LA SÉCURITÉ INTRINSÈQUE


The module must be installed according to the installation codes stipulated in the Canadian Electrical Code (CEC) or for US the National Electrical Code (NEC).

Explosion proof / Dust ignition proof installation:

Applicable for (7501A)

Explosion proof for Hazardous area Class I, Division 1, Groups ABCD; Class II, Division 1, Groups EFG; Class III Ex d IIC, Class I, Zone 1 Non Hazardous Area

T4, T5: -20/-40 ≤ Ta ≤ 85°C T100°C T6: -20/-40 ≤ Ta ≤ 70°C T85°C

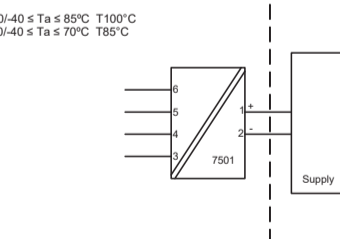

Terminal: 3,4,5,6 Sensor: RTD or TC Terminal: 1,2 Umax: 35 VDC

O-ring Sealing Silicone rubber: -40°C ≤ Ta ≤ +85°C FKM rubber: -20°C ≤ Ta ≤ +85°C

Explosion proof / Dust ignition proof installation:

Applicable for (7501A)

Conduit and sensor connections must be in NPT modified threads.

Only third party certified sensors suitable for Class I, Division 1, Groups ABCDEFG or Class I, Zone 1 IIC may be attached to the Temperature Transmitter without additional approval of the combination.

For Class I Group A installation and Class I Zone 1 installation, conduit seal is required within 18 inches of enclosure.

For an ambient temperature exceeding 70°C, heat resistant cables and cables suitable for at least 90°C shall be used.

The display cover must be screwed all the way in and the safety catch must be fastened before putting the module into service. Do not open / remove front cover unless area is known to be safe.

The remote temperature sensor must comply with the requirements for installation in hazardous locations "Class I, Division 1 / Zone 1, Groups ABCD / IIC"

The remote temperature sensor must comply with the requirements for Ex d installation

Only certified cable and cable glands shall be used that are suitable for the application and correctly installed.

For protection according to Type 4X / IP66 use Loctite 577 on threads of sensor and cable glands.

The enclosure must be connected to the potential matching line

Unused cable entries must be sealed by the blanking elements supplied with the 7501 or other Ex certified blanking elements.

If the transmitter is physically connected to a possible source of heating or cooling, e.g. by mounting to a process pipe or a temperature sensor, the temperature at the point of connection shall be within the ambient temperature range as given in the certificate.

When the process temperature range exceeds the service temperature range it shall be verified by on-site temperature measurements, taking the worst case conditions into account, that the service temperature does not exceed the range of the module.

For Class II, III, electrostatic charging of the paint layer shall be avoided.

No modification to the enclosure is allowed by the customer except as mentioned in the manual or installation drawing.



