



6437A

6437D

**DK****ADVARSEL**

Følgende operationer bør kun udføres på modulet i spændingsfrit tilstand og under ESD-sikre forhold. Installation, ledningsmontage og -demontage. Fejlfinding på modulet. Reparation af modulet må kun foretages af PR electronics A/S.

ADVARSEL

PR Loop Link programmeringsenheden må ikke benyttes til kommunikation med moduler installeret i Ex-område. Ved Ex-installation må kun godkendt udstyr anvendes. Enheder skal installeres i henhold til den tilhørende installationsvejledning ved montering i eksplosionsfarligt område.

SIKKERHEDSREGLER

Modtagelse og udpakning
Udpak modulet uden at beskadige det. Kontroller ved modtagelsen, at modulene sværer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på blivende plads.

Miljøforhold

Undgå direkte sollys, kraftigt støv eller varme, mekaniske rystelser og stød, og udsæt ikke modulet for regn eller kraftig fugt. Om nødvendigt skal opvarmning, ud over de opgivne grænser for omgivelsetemperatur, forhindres ved hjælp af ventilation.

Installation

Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendt med de tekniske udtryk, advarsler og instruktioner i installationsvejledningen, og som vil følge disse.

Modulet må kun installeres af kvalificerede personer, som er bekendt med national og international lovgivning, direktiver og standarder i det land, hvor modulet skal installeres.

Hvis der er tale om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler, eller alternativt direkte til PR electronics A/S.

Installation og tilslutning af modulene skal følge landets gældende regler for installation af elektrisk materiel.

Beskrivelse af indgang / udgang og forsyningssporringer findes i produktmanuallen, som kan hentes på www.prelectronics.dk.

Kalibrering og justering

Under kalibrering og justering skal mæling og tilslutning af eksterne spændinger udføres i henhold til denne installationsvejledning, og teknikeren skal benytte sikkerhedsmaßigt korrekte værktøjer og instrumenter.

Rengøring

Modulet må, i spændingsfrit tilstand, rengøres med en klud let fugtet med desinfektorer vand.

PC-programmering af SYSTEM 6437

Modulet konfigureres til den aktuelle opgave ved hjælp af en PC og PR electronics A/S' kommunikationsinterface Loop Link. Det er muligt at konfigurere modulene både med og uden tilslutning forsyningsspænding, idet kommunikationsinterfacet leverer nødvendig forsyning til opretningen. Kommunikationsinterfacet er galvanisk isoleret, så PC'en port er optimalt beskyttet. Kommunikationen er 2-vejs, så modulets opsætning kan hentes ind i PC'en, og opsætningen i PC'en kan sendes til modullet. For de brugere, der ikke selv vil foretage opsætning, kan modulene leveres konfigureret efter oplyst specifikation: indgangstype, mælområde, fejlfeltersdetektion og udgangssignal.

Elektriske specifikationer

Driftstemperaturområde:

Standard -50°C to +85°C

SIL -40°C to +80°C

Lagringstemperatur -50°C to +85°C

Forsyningsspænding:

6437A 7.5...48** VDC

6437D 7.5...30** VDC

6437, EU-RO 8.3...33.6 VDC ±10%

Max. internt effekttab ≤ 850 mW pr. kanal

Min. belastningsmodstand v. > 37 V forsyning (Forsyning - 37)/23 mA

Isolationsspænd., test/oper. 2.5 KVAC / 55 VAC

6437D 2.5 KVAC / 42 VAC

Kalibreringstemperatur 23...25°

Relativ fugtighed < 99% RH (ikke kond.)

Mål (H x B x D) 109 x 23,5 x 104 mm

Indgang for RTD-type:

Pt100 & Ni100

Indgang for TC-type:

B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

Spændingsindgang:

mV

Strømudgang:

Normalområde,

programmert 3.8...20.5/20.5...3.8 mA

Udvidet område (udgangsgrænser), programmert 3.5...23 / 23...3.5 mA

Belastning (V, strømudgang) ≤ (Vforr.-7.5)/0.023 [Ω]

Belastning (V, strømudgang) < 0.01% af span/100 Ω

Overholde myndighedsråd:

EMC 2014/30/EU & UK SI 2016/1091

ATEX 2014/34/EU & UK SI 2016/1107

RoHS 2011/65/EU & UK SI 2012/3032

EAC TR-CU 020/2011

EAC Ex TR-CU 012/2011

Godkender:

Ex / I.S.:

ATEX DEKRA 1BATEX0135X

6437D DEKRA 16ATEX0047X

IECEx DEKRA 16.0029X

cCSAus FM16CA0146X/FM16US0287X

INMETRO DEKRA 16.0008X

NEPSI GY18.1057X

EAC Ex RU C-DK.N698.B.00192

Marinegodkendelse:

EU RO Mutual Recognition

Type Approval MRA00000023

Funktionel sikkerhed:

SIL 2-certificeret via Full Assessment iht. IEC 61508 : 2010

SFF 93% - type B komponent

SIL 3 Muligt via redundant struktur (HFT=0; 1oo2)

FMEDA-rapport - www.prelectronics.com

* Note: Vær opmærksom på at minimum forsyningsspændingen måles på 6437-terminalerne, dvs. alle eksterne spændingsfald skal medregnes.

** Note: Beskyt enheden mod overspænding ved at anvende en spændingsforsyning af god kvalitet eller alternativt monter overspændingsbeskyttelsesudstyr.

* Note: Observe that the minimum Supply Voltage must be measured at the terminals of the 6437, i.e. all external drops must be considered.

** Note: Make sure to protect the device from overvoltages by using a suitable power supply or by installing overvoltage protection devices.

* NB: Observe que la tension d'alimentation minimale doit être mesurée aux bornes du 6437, c'est-à-dire que toutes les chutes externes doivent être prises en considération.

** NB: Assurez-vous de protéger l'appareil contre les surtensions en utilisant une alimentation électrique appropriée ou en installant des dispositifs de protection contre les surtensions.

* Hinweis: Beachten Sie, dass die minimale Versorgungsspannung an den Klemmen des 6437 gemessen werden muss. D.h. dass alle externen Spannungsabfälle berücksichtigt werden müssen.

** Hinweis: Achten Sie darauf, das Gerät vor Überspannungen zu schützen, indem Sie ein geeignetes Netzteil verwenden oder Überspannungsschutzgeräte installieren.

UK**WARNING**

The following operations should only be carried out on a disconnected device and under ESD safe conditions:
General mounting, connection and disconnection of wires. Troubleshooting the device.
Repair of the device must be done by PR electronics A/S only.

WARNING

Do not use the Loop Link programming interface to program the units in Ex area.
For hazardous area installation, only certified test equipment may be used.
For installation in classified area the devices must be installed according to the appropriate installation drawings.

SAFETY INSTRUCTIONS

Receipt and unpacking
Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

Mounting

Only qualified technicians who are familiar with the technical terms, warnings, and instructions in this installation guide and who are able to follow these should connect the device.

The device shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

Hvis der er tale om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler, eller alternativt direkte til PR electronics A/S.

Installation and adjustment of modulene skal følge landets gældende regler for installation af elektrisk materiel.

Beskrivelse af indgang / udgang og forsyningssporringer findes i produktmanuallen, som kan hentes på www.prelectronics.dk.

Calibration and adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this installation guide. The technician must use tools and instruments that are safe to use.

Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

PC programming of SYSTEM 6437

The device is configured to the present task by way of a PC and PR electronics A/S' communications interface Loop Link. The device can be configured with or without a connected supply voltage as the communications interface supplies the necessary voltage to the set-up. The communications interface is galvanically isolated to protect the PC port. Communication is 2-way to allow the retrieval of the device set-up into the PC and to allow the transmission of the PC set-up to the device. For users who do not wish to do the set-up themselves, the device can be delivered configured according to customer specifications: input type, measurement range, sensor error detection, and output signal.

Electrical specifications

Ambient operating temperature range:
Standard -50°C to +85°C

SIL -40°C to +80°C

Storage temperature -50°C to +85°C

Supply voltage:

6437A 7.5...48** VDC

6437D 7.5...30** VDC

6437, EU-RO 8.3...33.6 VDC ±10%

Max. internal effekttab ≤ 850 mW pr. kanal

> 37 V forsyning (Forsyning - 37)/23 mA

Isolationsspænd., test/oper. 2.5 KVAC / 55 VAC

6437D 2.5 KVAC / 42 VAC

Kalibreringstemperatur 23...25°

Relative fugtighed < 99% RH (sans cond.)

Dimensions (H x W x D) 109 x 23,5 x 104 mm

Input for RTD type:

Pt100 & Ni100

Input for TC type:

B, E, J, K, L, N, R, S, T, U, W3, W5, Lr

Lin R:

Ohm & Kohm

Spændingsindgang:

mV

Strømudgang:

Normalområde,

programmert 3.8...20.5/20.5...3.8 mA

Udvidet område (udgangsgrænser), programmert 3.5...23 / 23...3.5 mA

Belastning (V, strømudgang) ≤ (Vforr.-7.5)/0.023 [Ω]

Belastning (V, strømudgang) < 0.01% af span/100 Ω

Observed authority requirements:

EMC 2014/30/EU & UK SI 2016/1091

ATEX 2014/34/EU & UK SI 2016/1107

RoHS 2011/65/EU & UK SI 20



ATEX Installation drawing 6437QA01-V4R0

ATEX Certificate DEKRA 16ATEX 0047X
Standards: EN 60079-0:2018, EN 60079-11:2012

Ex ia Installation
For safe installation of the 6431Dxxx and 6437Dxxx the following must be observed.



Marking II 1 G Ex ia IIC T6...T4 Ga or II 2 (G) Ex ib [Ga] IIC T6...T4 Gb II 2 D Ex ib [IIC Db] I M1 Ex ia I Ma

Hazardous Area Zone 0, 1, 2, 21, 22 and M1

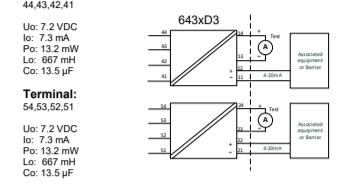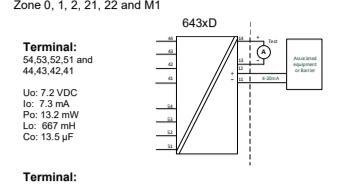

Ex ib Installation

Hazardous Area Zone 0, 1, 2, 21, 22 and M1

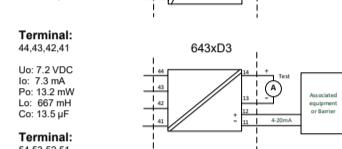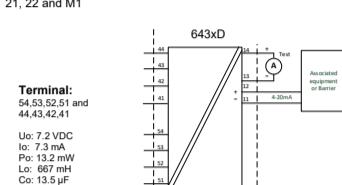

Ex ib and Ib installation

UI: 30 VDC; II: 120 mA; Li: 0 µH; Cl: 1 nF

Pi	Temperature class	Maximum ambient temperature
900 mW	Single and dual input	90°C
T5	+65°C	+60°C
T4	+85°C	+85°C
750 mW	T6	+55°C
T5	+70°C	+65°C
T4	+85°C	+85°C
610 mW	T6	+60°C
T5	+75°C	+70°C
T4	+85°C	+85°C

General installation instructions

Very few manufacturers can be taken from the first two digits in the serial number.

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

The distance between terminals, inclusive the wire's bare part, shall be at least 3 mm separated from any earthed metal.

The test pins allow measurement of loop current directly while maintaining loop integrity. Power must be connected to the transmitter when using the test pins.

If the transmitter was applied a type of protection Ex ia or Ex ic, it may afterwards not be applied for another type of protection.

The front connector and front test pads provide an intrinsically safe extension-port signal and may only be connected to dedicated equipment of PR electronics.

Warning: Do not connect or disconnect plugs and sockets when energized.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter shall be mounted in an enclosure, that is providing a degree of protection of at least IP5X according to EN60529.

Aluminum enclosures are not allowed for mines.

The enclosure shall be suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For PR, the surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer.

For installation in mines the following instructions apply:

The transmitter shall be mounted in a metal enclosure that is providing a degree of protection of at least IP54 according to EN60529.

Aluminum enclosures are not allowed for mines.

The enclosure shall be suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.



Ex nA / Ex ec / Ex ic Installation

For safe installation of the 6431Axxx and 6437Axxx the following must be observed.

ATEX Certificate DEKRA 16ATEX136X
Standards: EN 60079-0 : 2018, EN 60079-11 : 2012
EN 60079-17 : 2015+AC:2016, EN 60079-15 : 2010

Marking II 3 G Ex nA IIC T6...T4 Gc
II 3 G Ex ec IIC T6...T4 Gc
II 3 G Ex ic IIC T6...T4 Gc
II 3 D Ex ic IIC Dc

Hazardous Area Zone 2 and 22

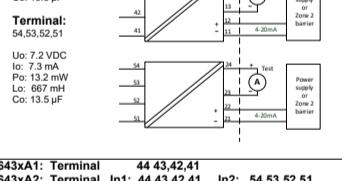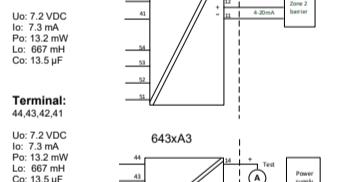

Ex nA & Ex ec

Ex ic

Vmax = 7.2 VDC

Po: 13.2 mW; Lo: 667 mH; Co: 13.5µF

643xA1: Terminal 11,12

643xA2: Terminal 11,12

643xA3: Terminal Ch1: 44,43,42,41 Ch2: 21,22

Supply / output circuit

Maximum ambient temperature

Ex nA & Ex ec	Ex ic	Ex ic	Temperatura class	Single and dual input	Two channel
Li = 0 uH	Li = 48 VDC, Li = 0 uH,	Li = 48 VDC, Li = 1 nF,	T4 +85°C	+85°C	+85°C
Vmax= 37 VDC	Ui= 37 VDC	Ui= 37 VDC	T5 +70°C	+65°C	+65°C

Vmax= 30 VDC	Ui= 30 VDC	Ui= 30 VDC	Li = 48 VDC, Li = 0 uH, Ci = 1 nF	T4 +85°C	+85°C
Vmax= 30 VDC	Ui= 30 VDC	Ui= 30 VDC	Li = 48 VDC, Li = 0 uH, Ci = 1 nF	T5 +75°C	+70°C

General installation instructions

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

For an ambient temperature ≥ 60°C, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The enclosure shall be suitable for the application and correctly installed.

The distance between terminals, inclusive the wire's bare part, shall be at least 3 mm separated from any earthed metal.

"TEST" connection, may only be applied when the area is safe, or if supply / output circuit and the applied current meter are intrinsically safe.

Warning: Do not connect or disconnect Terminal Blocks when energized.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 in accordance with IEC 60079-0, which is suitable for the application and correctly installed.

The enclosure inside the enclosure shall be pollution degree 2 or better as defined in IEC 60664-1.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

For PR, the surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec.

Additionally, the area inside the enclosure shall be pollution degree 2 or better as defined in IEC 60664-1.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

For EPL, the surface temperature of the outer enclosure is +20 K above the ambient temperature.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in an explosive atmosphere requiring the use of equipment protection level Ig and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC 60079-0, which is suitable for the application and correctly installed.

The enclosure inside the enclosure shall be pollution degree 2 or better as defined in IEC 60664-1.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

For EPL, the surface temperature of the outer enclosure is +20 K above the ambient temperature.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in an explosive atmosphere requiring the use of equipment protection level Ig and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

For EPL, the surface temperature of the outer enclosure is +20 K above the ambient temperature.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in an explosive atmosphere requiring the use of equipment protection level Ig and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

For EPL, the surface temperature of the outer enclosure is +20 K above the ambient temperature.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in an explosive atmosphere requiring the use of equipment protection level Ig and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive gas atmosphere, the following instructions apply:

For EPL, the surface temperature of the outer enclosure is +20 K above the ambient temperature.

If the transmitter is supplied with an intrinsically safe signal "ic" (e.g. a passive device), the transmitter shall be mounted in an enclosure that is of protection Ex nA or Ex ec, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in a potentially explosive dust atmosphere, the following instructions apply:

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

Cable entry devices and blanking elements shall fulfill the same requirements.

For installation in an explosive atmosphere requiring the use of equipment protection level Ig and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.